

BR HEADLIGHT SYSTEM

INSTRUCTIONS FOR

CHARGING.

BR CATALOGUE NO 017070014

WHEN CHARGING THE LAMP THERE IS A POSSIBILITY OF THE LAMP RELEASING HYDROGEN GAS. THE IGNITION OF THIS GAS COULD CAUSE INJURY TO OPERATOR PERSONNEL.

- 1) THE LAMP SHOULD BE CHARGED IN A WELL VENTILATED AREA WITH NO NAKED FLAMES OR IGNITION SOURCE.
- 2) THE LAMP MUST BE SWITCHED OFF & THE CHARGER MUST BE CONNECTED TO THE LAMP PRIOR TO THE CHARGER BEING SWITCHED ON. CHARGING MUST TAKE PLACE WITH THE LAMP IN THE VERTICAL POSITION.
- 3) CHARGING IS COMPLETED WHEN THE INDICATOR ON THE CHARGER INDICATES "BATTERY READY".
- 4) AFTER CHARGING, THE CHARGER MUST BE SWITCHED OFF BEFORE DISCONNECTION FROM THE LAMP. THE LAMP SHALL BE PLACED ON ITS SIDE WITH THE OPEN VENT – CHARGING SOCKET UPPERMOST FOR APPROXIMATELY 30 SECONDS TO RELEASE ANY TRAPPED HYDROGEN GAS FROM THE LAMP.
- 5) REPLACE VENT – CHARGING SOCKET COVER PRIOR TO THE LAMP BEING PUT BACK INTO SERVICE.