



Wennington Road, Southport PR9 7TN. England
Tel: 01704 518000 Fax: 01704 518001
WEB SITE <http://www.unipartdorman.co.uk>
E MAIL address – dorman.info@unipartdorman.co.uk

Health and safety

Every effort has been made to ensure the accuracy of the information given in our publications, but in accordance with our policy of continually improving our products we reserve the right to modify designs and specifications whenever necessary. All equipment is designed to conform to relevant British and International standards. Every care is taken to ensure that, as far as reasonably practical, it will perform without risk to health. It is essential that accepted codes of professional practice are followed in the assembly, installation and commissioning of the equipment. If in doubt with respect to any of these instructions, please consult Dorman before installing the device.

Dorman reserves the right to vary any component part to meet the required specifications without prior notice.



Certificate No. FM 14371

Dorman ref. No C64.65044 iss 0

Mask Fitting Kit – Another Train Coming Fitting Instructions

To be read before commencing
Operation



General.

In general before commencing any modifications, all local safety requirements affecting the safe working environment of the installation either directly or indirectly should be carried out.

The lamps should only be modified both electrically and mechanically, by staff deemed competent in these fields by their employer.

Before any work is carried out, the lamp does not need to be disconnected from the signal back plate or any supporting mounting plates.

Any modifications should be carried out in a clean & dry environment.

The Mask Fitting Kit – Another Train Coming is only used on the RED WIG WAG Module.


Mask Fitting Kit – Another Train Coming WIG WAG RED Module

Fitting kit (Part No. D87.86024) should be used to ensure that the Mask Diffuser and Clamp Ring are fitted correctly.

A) Using a suitable 2.5mm ALLEN key or POZI drive No 2 bit, remove the three existing M4 x 20 Stainless Steel Long C'Sunk Socket Head Screws or the M4 x 35 Stainless Steel C'Sunk Pozi Head Screws holding the main lens ring to the WIG WAG Module. See Example Picture Below.

Note: New modules are manufactured with the M4 x 25 Stainless Steel C'Sunk Pozi Head Screws fitted as standard.


TOP OF WIG WAG MODULE

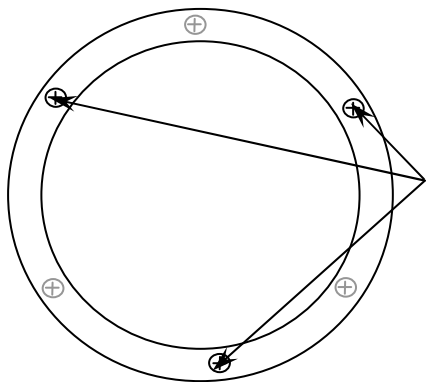

Remove the three M4 x 20 Long C'Sunk Screws or M4 x 25 Stainless Steel C'Sunk Pozi Head Screws

B) After removal of existing screws, please discard according to local regulations.

C) Fit the Another Train Coming Diffuser and Clamp Ring to the WIG WAG Module Lens Ring, making sure the screw location holes on the WIG WAG Module are aligned with the holes on the Mask Diffuser and Clamp Ring. Insert the three M4 x 35 Stainless Steel C'Sunk Pozi Head Screws provided in the Mask fitting kit – Another Train Coming.

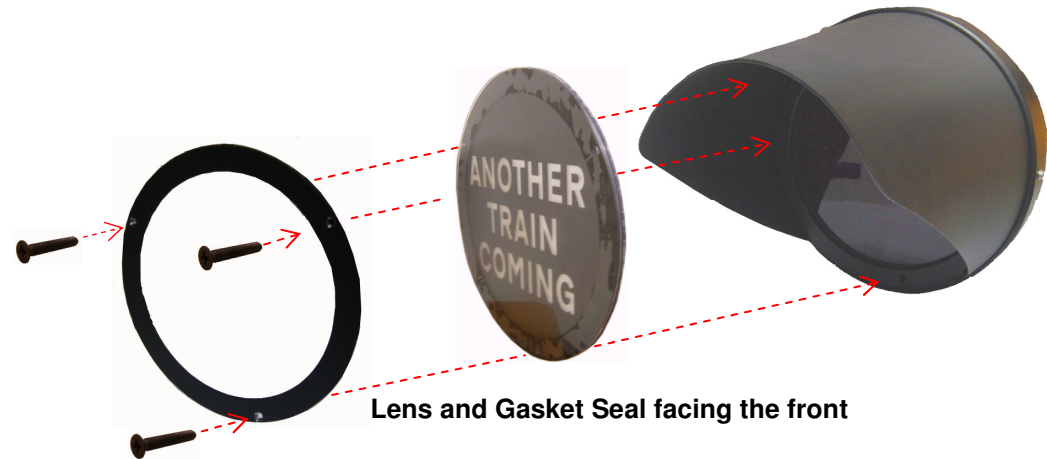

Note: Tighten the three M4 x 35 Stainless Steel C'Sunk Pozi Head Screws at 1.2NM Torque.

Dorman Part Numbers:

PADS NUMBER	DORMAN PART NUMBER	DESCRIPTION
086/000038	D87.86023	Mask Fitting Kit – Another Train Coming

Approvals

Acceptance Number: PA05/04023

