

Wennington Road, Southport PR9 7TN. England Tel: 01704 518000 Fax: 01704 518001 WEB SITE http://www.unipartdorman.co.uk E MAIL address – dorman.info@unipartdorman.co.uk CLS Upper Backboard (25mm Joggle) Fitting Instructions

To be read before commencing Operation

Health and safety

Every effort has been made to ensure the accuracy of the information given in our publications, but in accordance with our policy of continually improving our products we reserve the right to modify designs and specifications whenever necessary. All equipment is designed to conform to relevant British and International standards. Every care is taken to ensure that, as far as reasonably practical, it will perform without risk to health. It is essential that accepted codes of professional practice are followed in the assembly, installation and commissioning of the equipment. If in doubt with respect to any of these instructions, please consult Dorman before installing the device.

Dorman reserves the right to vary any component part to meet the required specifications without prior notice.




Dorman ref. No C64.63432 issue 1

Select the required backboard extension kit, based on the configuration of the Junction Indicator (JI) arm positions.


The following kits are available with a 25mm joggle:-

<u>Kit</u>	Part Number	PADS Number
Full Upper Backboard Extension Kit (This is the standard kit which will fit all JI arm configurations apart from ones containing the options below)	D86.85057	086/009004
Position 3JI Upper Backboard Extension Kit	D86.85058	086/009005
Position 6JI Upper Backboard Extension Kit	D86.85059	086/009006
Position 3+6JI Upper Backboard Extension Kit	D86.85060	086/009007

Fitting Instructions

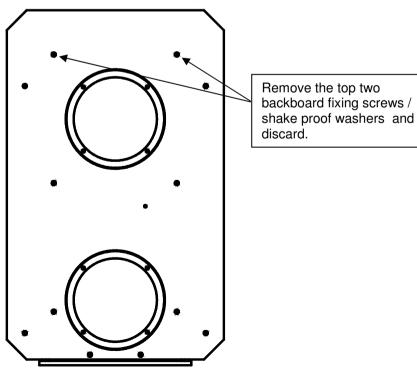

Fit the required backboard extension to the backboard using the supplied countersunk screws (4-off) and shake proof washers (4-off). Torque screws to 1.5N.m

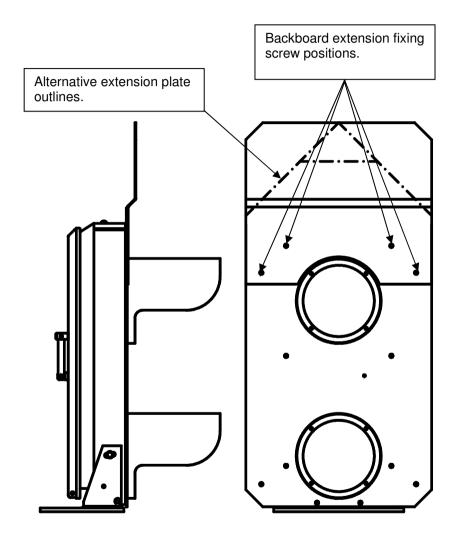

Signal with upper backboard extension fitted. (Full upper backboard extension shown)