

Wennington Road, Southport PR9 7TN. England Tel: 01704 518000 Fax: 01704 518001 WEB SITE http://www.unipartdorman.co.uk E MAIL address – dorman.info@unipartdorman.co.uk

Health and safety

Every effort has been made to ensure the accuracy of the information given in our publications, but in accordance with our policy of continually improving our products we reserve the right to modify designs and specifications whenever necessary. All equipment is designed to conform to relevant British and International standards. Every care is taken to ensure that, as far as reasonably practical, it will perform without risk to health. It is essential that accepted codes of professional practice are followed in the assembly, installation and commissioning of the equipment. If in doubt with respect to any of these instructions, please consult Dorman before installing the device.

Dorman reserves the right to vary any component part to meet the required specifications without prior notice.




LED Fixed Tail Lamp

LFT2N/R/01/C/00 : 110v LFT2N/R/02/C/00 : 24v LFT2N/R/03/C/00 : 70.5v

Installation Instructions
Old B.R. Enclosure

To be read before commencing installation.



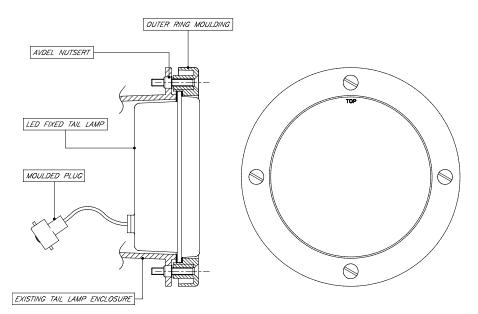

INSTALLATION INSTRUCTIONS

It is recommended that this unit is installed by a qualified electrician and wired in accordance with the relevant track and signal code of practice.

Please Note:- There are no serviceable parts inside.

- 1. Remove existing door/lens assembly and grind back any protrusions to clear the Outer Ring moulding. Take care not to damage the raised sealing face on the enclosure.
- 2. Remove the existing tungsten lamp.
- 3. Place the Outer Ring and Tail Lamp centrally on the enclosure, with the four fixing holes in the required radial position. Spot through the four holes in the Outer Ring and remove. Drill enclosure φ9,6 and fit the four M6 Avdel nutserts.
- 4. Offer the Tail Lamp to the enclosure and connect the moulded plug into the lamp holder. If this fitting is not suitable, crop off the plug and re-terminate to suit the application. The unit is not polarity conscious.

5. Fit the Outer Ring, ensuring correct orientation of the Tail Lamp ('TOP' marked on lens to be uppermost). Secure the assembly by tightening

the four supplied screws in rotation, 2 turns at a time, until the bosses in the

Outer Ring are pulled hard up against the mating face of the enclosure.

Tail Lamp Dorman Part Number	Specification	
	Railway Ind. Part Number	Nominal Supply
LFT2N/R/01/C/00 LFT2N/R/02/C/00 LFT2N/R/03/C/00	XXXXXXXXXXXX XXXXXXXXXXXX XXXXXXXXXXXX	110 Volts 24 Volts 70.5 Volts

Fitting Kit		
Dorman	Railway Ind.	
Part Number	Part Number	
D70.69007	XXXXXXXXXXXXX	



Disposal Instructions:-

Disposal in accordance with local and national regulations.